
INSTALLATION INSTRUCTIONS

RAIL 6 WET S6W

DRYWALL FLANGELESS

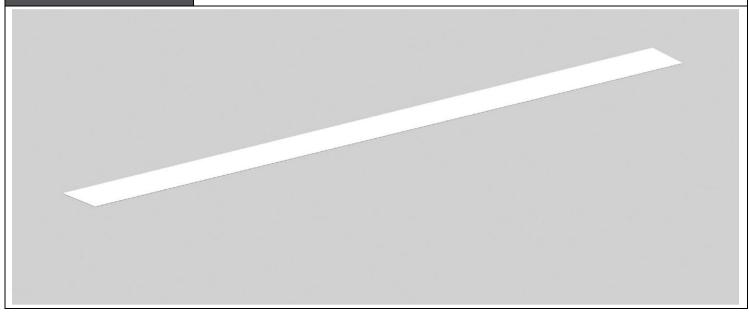

NOTE: The following instructions provide general guidelines for product installation. For additional information consult the applicable electrical codes or contact factory directly for support before attempting anything with uncertainty.

CAUTION: Do not assemble fixture runs on floor.


WARNING: Risk of fire and electrical shock. **DISCONNECT POWER AT ELECTRICAL PANEL** before installing or servicing this product.

GENERAL SAFETY INSTRUCTIONS:

- 1. Read all instructions prior to installing this fixture.
- 2. This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.
- 3. All wiring must be performed by a qualified electrician in accordance with national and local building and electrical codes.
- 4. This fixture must be suitably grounded for your protection against shock hazards and to assure proper operation.
- 5. Make sure that the power source conforms to the requirements of this fixture.

INSTALLATION INSTRUCTIONS

DRYWALL FLANGELESS

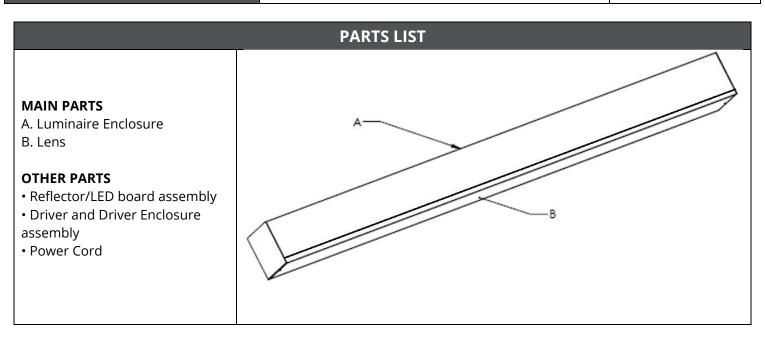


INSTALLATION INSTRUCTIONS


DRYWALL FLANGELESS


REQUIRED TOOLS			
DRILL	#8 PHILLIPS BIT	#8 PHILLIPS SCREWDRIVER	WRENCH
Important: Use clean gloves to avoid adding oil/dirt to optics surface. Avoid scratching optics by using installation tools with soft plastic rounded edges			


WIRING DIAGRAMS

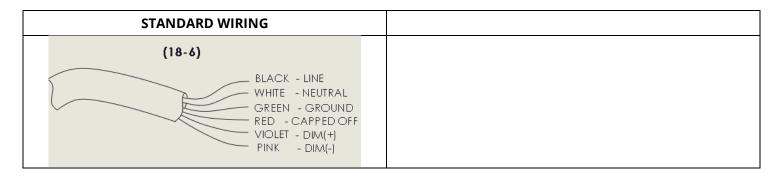


STEP-BY-STEP INSTRUCTIONS

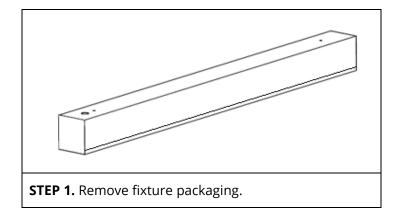


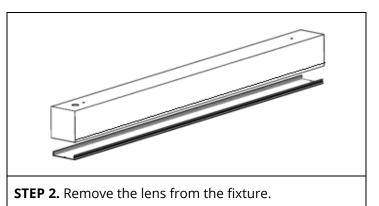


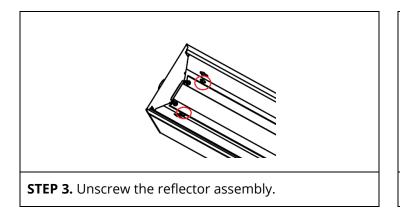

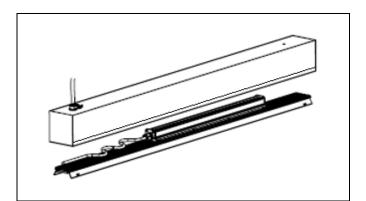


STEP 5. Install BX connector (supplied by others). Feed BX cable (supplied by others) through connector and the body enclosure. Tighten BX connector screw. Wire power cord to BX cable using waterproof wire nuts (supplied by others). Refer to provided wiring diagram.

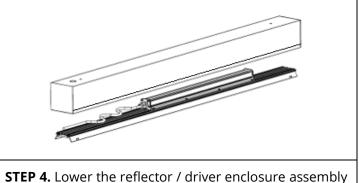

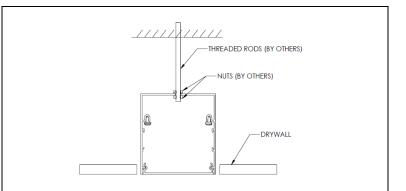


STEP 6. Feed threaded mounting rod (by others) through mounting locations and adjust nut to ensure fixture is parallel to drywall. Insert the fixture all the way through the opening in the ceiling. Insert the second nut (by others) through the fixture and fasten the fixture in place. Repeat with remaining mounting locations until fixture is parallel along entire length. Reinstall reflector / driver enclosure assembly and lens.

S6W

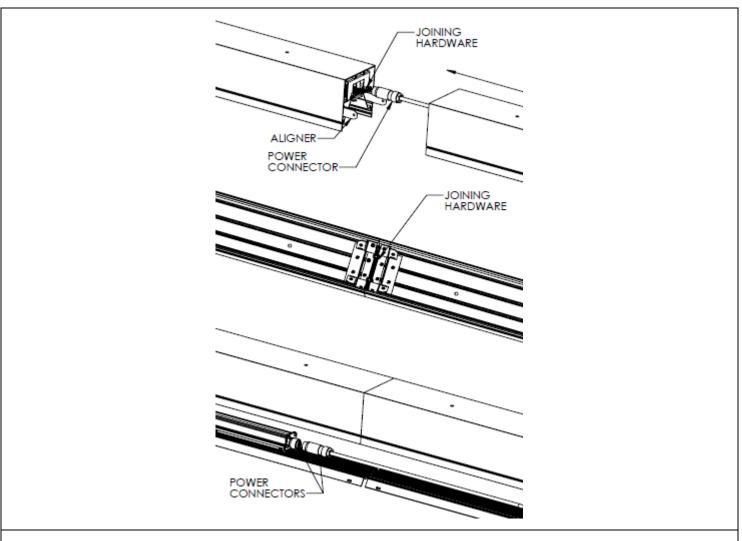

STEP 7. For continuous runs, install Start fixture first (as per steps 1-6). <u>Do not apply power</u>. Install joining fixture (as per steps 1-4 and step 6). Align joining fixture and slide it into place. Secure with joining hardware. And then connect power connectors together. Reinstall reflector / driver enclosure assembly and lens.

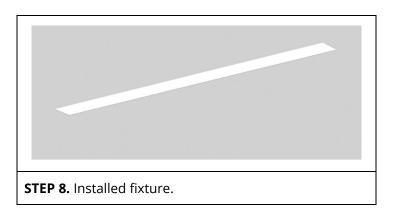

DRYWALL FLANGELESS


S6W


MAINTENANCE

REQUIRED TOOLS:


- Plastic / Latex Gloves
- Screwdriver

Important: Use clean gloves to avoid adding oil/dirt to reflector surface. Avoid scratching reflector surface by using installation tools with soft plastic rounded edges.

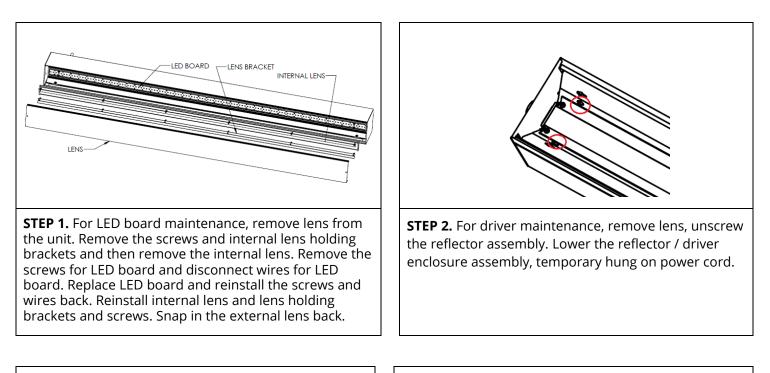

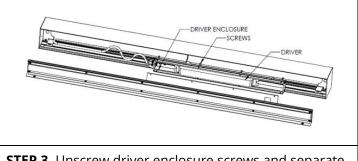

STEP 3. Unscrew driver enclosure screws and separate driver enclosure, cover plate from the reflector.

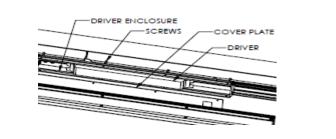

STEP 4. Remove and service driver as required. Be sure to wire correctly (both power and dimming, and the wires to LED board). Reinstall cover plate, driver enclosure to reflector assembly, ensure all wires are inside of the driver enclosure. Reinstall reflector and driver enclosure assembly to fixture. Reinstall lens.

Specifications and design subject to change without notice.

T 1.800.621.6785 | T 519.822.4381 F 519.822.4589 | www.metalumen.com